

# Prescitech

## Quick Installation Guide

### Repeater Mode

# RX12

Below setup guide just for Repeater Mode by smart phone & WPS method.

For AP (Access Point) Mode & troubleshoots, please refer to USER MANUAL.

## Preparing

1. The router/AP works normal.
2. Download the APP “TenbayWiFi” by this link  
<http://www.prescitech.com/download/app>
3. Plug the RX12 into an electrical outlet.

## Smart Phone Setup Guide

1. Power on the RX12 next to your Router & wait the LED turns to red/blue/green circle blink.
2. The WIFI of smartphone connects to “RX12”.
3. Once connected, open the APP “TenbayWiFi” click “Search”.
4. Click the Model Name: RX12, fill in “admin” as the first setup & login.
5. Setup a password of your RX12 admin page & give it a name, you can also click “Next” directly as default setting.
6. Choose “Repeater Mode”, then click “Next”.
7. After finish “Scanning...”, choose your target router, and fill in the router’s password on “Target WiFi Password”, click “Next”.

8. Get the summary of your setting of RX12, then Click “Save”. Wait for around 2 minutes for the RX12 reboot itself.

**Note:** Once setup successful, the WLAN LEDs would change into Lit Blue.

## WPS Setup Guide

1. Power on the RX12 next to your router.
2. Press the WPS button of the front panel on RX12 around 6 seconds.
3. Once release, the RX12 WPS light starts blinking green, press the WPS of your router within 2 minutes.
4. After connected successful, the SSID of RX12 will be changed into “YourTargetRouter\_EXT2.4G” & “YourTargetRouter\_EXT5G”. You can connect the RX12 by using the same password with your router.

US COST FREE Tech Support:

**800-213-1134**

(PST Mon-Sun 06:00-24:00)

Website: [www.prescitech.com](http://www.prescitech.com)

E-Mail: [support@prescitech.com](mailto:support@prescitech.com)